

SP

Installation and operating instructions



Other languages

<http://net.grundfos.com/qr/i/98074911>

be
think
innovate

GRUNDFOS 

Original installation and operating instructions

CONTENTS

	Page
1. General information	2
1.1 Hazard statements	2
1.2 Notes	3
2. Introduction	3
3. Handling and storing the product	3
3.1 Handling	3
3.2 Storage	3
4. Applications	4
4.1 Pumped liquids	4
4.2 Sound pressure level	4
4.3 Drinking water	4
5. Installation requirements	5
5.1 Checking the motor liquid	5
5.2 Positional requirements	6
5.3 Pump/motor diameter	6
5.4 Liquid temperatures and motor cooling	7
5.5 Pipe connection	7
6. Electrical connection	7
6.1 Motor protection	8
6.2 Lightning protection	9
6.3 Cable sizing	9
6.4 Control of single-phase MS402 motors	10
6.5 Connection of single-phase motors	10
6.6 Connection of three-phase motors	11
7. Setting up the CUE frequency converter in an SPE system	12
8. Mechanical installation	13
8.1 Removing and fitting the cable guard	13
8.2 Fitting of the submersible drop cable and motor cable	13
8.3 Lifting the product	13
8.4 Riser pipe	14
8.5 Placing in borehole	14
8.6 Cable clips	14
8.7 Lowering the pump	14
8.8 Installation depth	14
9. Startup and operation	15
9.1 Startup	15
9.2 Operation	15
10. Service	16
10.1 SPE	16
11. Fault finding	16
11.1 SPE	16
12. Checking motor and cable	18
12.1 SPE	18
13. Disposing of hazardous or toxic materials	19
14. Disposing of the product	19



Read this document before installing the product. Installation and operation must comply with local regulations and accepted codes of good practice.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

1. General information

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



SIGNAL WORD

Description of hazard

Consequence of ignoring the warning.
- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

2. Introduction

These instructions apply to Grundfos submersible pumps, type SP and SPA, with submersible motors, types Grundfos MS/MMS. If the pump is fitted with a motor of another brand than Grundfos MS or MMS, note that the motor data may differ from the data stated in these instructions.

3. Handling and storing the product

3.1 Handling

WARNING

Crushing of feet



Death or serious personal injury

- Stack the pumps with the biggest at the bottom, and do not stack above 1 m.
- Use lifting equipment which is approved for the weight of the product.
- Wear personal protective equipment.

WARNING

Crushing of hands



Death or serious personal injury

- Stack the pumps with the biggest at the bottom, and do not stack above 1 m.
- Use lifting equipment which is approved for the weight of the product.



The pump must be stored in the packing until it is ready for installation.
Handle the pump with care.



The extra nameplate supplied with the pump must be fixed at the installation site.

Do not expose the pump to unnecessary impact and shocks.

3.2 Storage

Storage temperature

Pump: -20 - +60 °C.

Motor: -20 - +70 °C.

The motors must be stored in a closed, dry and well ventilated room.



If MMS motors are stored, the shaft must be turned by hand at least once a month. If a motor has been stored for more than one year before installation, the rotating parts of the motor must be dismantled and checked before use.

The pump must not be exposed to direct sunlight.

If the pump has been unpacked, it must be stored horizontally, adequately supported, or vertically to prevent misalignment of the pump. Make sure that the pump cannot roll or fall over.

During storage, the pump can be supported as shown in fig. 1.

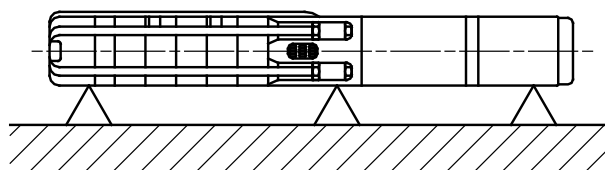


Fig. 1 Pump position during storage

Frost protection

If the pump has to be stored after use, it must be stored on a frost-free location, or the motor liquid must be frost-proof.

4. Applications

Grundfos SP submersible pumps are designed for a wide range of water supply and liquid transfer applications, such as the supply of fresh water to private homes or waterworks, water supply in horticulture and agriculture, drawdown of groundwater and pressure boosting, and various industrial jobs.

The pump must be installed so that the suction interconnector is completely submerged in the liquid. The pump can be installed horizontally or vertically. See section [5.2 Positional requirements](#).

4.1 Pumped liquids

Clean, thin, non-explosive liquids without solid particles or fibres. The maximum sand content of the water must not exceed 50/100/150 ppm. A larger sand content will reduce the life of the pump and increase the risk of blockage.

Pump type	Maximum content of sand [ppm]
SP 1A - SP 5A	50
SP 7 - SP 14	150
SP 17 - SP 60	100
SP 77 - SP 215	50



When pumping liquids with a density higher than water (998-1000 kg/m³), motors with correspondingly higher outputs must be used.

If liquids with a viscosity higher than that of water are to be pumped, contact Grundfos.

N EN 1.4401 and R EN 1.4539 grade stainless steel pump sets are designed for liquids more aggressive than drinking water.

The maximum liquid temperature appears from section [5.4 Liquid temperatures and motor cooling](#).

4.2 Sound pressure level

The sound pressure level has been measured in accordance with the rules laid down in the EC machinery directive 2006/42/EC.

Sound pressure level of pumps

The values apply to pumps submerged in water.

Pump type	\bar{L}_{pA} [dB(A)]
SP 1A	
SP 2A	
SP 3A	
SP 5A	
SP 7	
SP 9	
SP 11	
SP 14	
SP 17	
SP 30	
SP 46	
SP 60	
SP 77	
SP 95	
SP 125	79
SP 160	79
SP 215	82

less than 70

Sound pressure level of motors

The sound pressure level of Grundfos MS and MMS motors is lower than 70 dB(A).

Other motor brands: See installation and operating instructions for these motors.

4.3 Drinking water

If the product is used for drinking water, the following precautions must be taken to avoid contamination:

- Before use, make sure that the product does not come into contact with dust or with chemicals not suitable for contact with drinking water, for example lubricants, greases or oils.
- If the pump is used with potentially toxic liquids, it can no longer be used for drinking water.
- In case of maintenance, be sure to always use original parts to maintain the initial hygienic characteristics of the product.

5. Installation requirements

DANGER

Electric shock



- Death or serious personal injury
- Switch off the power supply before starting any work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

WARNING

Crushing of feet



- Death or serious personal injury
- When lifting the pump out of the box, use lifting equipment which is approved for the weight of the product.
 - Wear personal protective equipment.

WARNING

Crushing of hands



- Death or serious personal injury
- When lifting the pump out of the box, use lifting equipment which is approved for the weight of the product.
 - Wear personal protective equipment.



The use of a sine-wave filter is mandatory when operating an SPE pump set.



Grundfos recommends to fit a 30 cm long pipe to the pump to facilitate handling of the pump during installation.

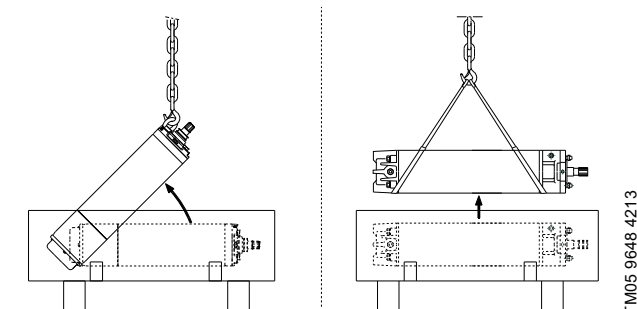


Fig. 2 Handling of the motor

5.1 Checking the motor liquid

The motors are factory-filled with a special FDA approved non-toxic liquid which is frost-proof down to -20°C .



Check the level of motor liquid and refill if required. Use tap water.



If frost protection is required, special Grundfos liquid must be used to refill the motor. Otherwise tap water may be used for refilling; however refill liquid as described below.

5.1.1 Grundfos MS4000 and MS402 motors

The filling hole for motor liquid is placed in the following positions:

- MS4000: on the side of the motor near the top
 - MS402: in the bottom of the motor.
1. Position the submersible pump as shown in fig. 3. The filling screw must be at the highest point of the motor.
 2. Remove the screw from the filling hole.
 3. Inject liquid into the motor with the filling syringe until the liquid runs back out of the filling hole. See fig. 3.
 4. Replace the screw in the filling hole and tighten securely before changing the position of the pump.

Torques

- MS4000: 3.0 Nm.
- MS402: 2.0 Nm.

The submersible pump is now ready for installation.

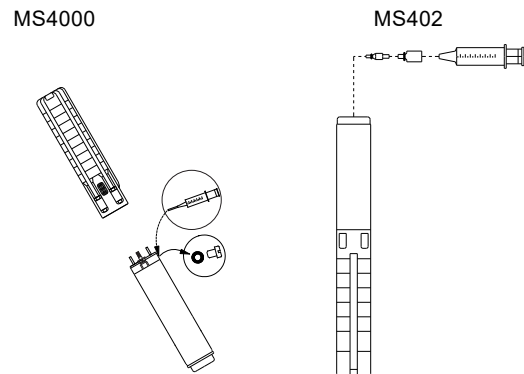


Fig. 3 Motor position during filling - MS4000 and MS402

5.1.2 Grundfos MS6000 motors

- If the motor is delivered from stock, the liquid level must be checked before the motor is installed. See fig. 4.
- In the case of service, the liquid level must be checked. See fig. 4.

Filling procedure:

The filling hole for motor liquid is placed at the top of the motor.

1. Position the submersible motor as shown in fig. 4. The filling screw must be at the highest point of the motor.
2. Remove the screw from the filling hole.
3. Inject liquid into the motor with the filling syringe (fig. 4) until the liquid runs back out of the filling hole.
4. Replace the screw in the filling hole and tighten securely before changing the position of the motor.

Torque: 3.0 Nm.

The submersible motor is now ready for installation.

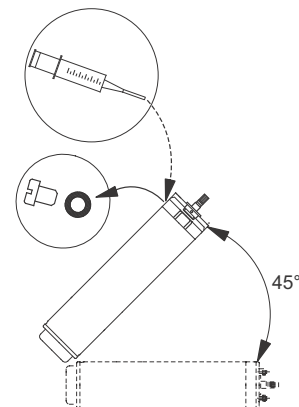


Fig. 4 Motor position during filling - MS6000

TM00 6423 2220

TM05 9648 4213

TM03 8129 1920

5.1.3 Grundfos MMS6, MMS8000, MMS10000 and MMS12000 motors

Filling procedure:

Place the motor at a 45 ° angle with the top of the motor upwards. See fig. 5.

1. Unscrew the plug (A) and place a funnel in the hole.
2. Pour tap water into the motor until the motor liquid inside the motor starts running out at the plug (A).



Do not use motor liquid that contains oil.

3. Remove the funnel and refit the plug(A).



Before fitting the motor to a pump after a long period of storage, lubricate the shaft seal by adding a few drops of water and turning the shaft.

The submersible motor is now ready for assembly with the pump and ready for installation.

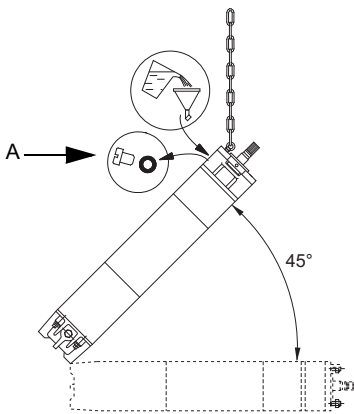


Fig. 5 Motor position during filling - MMS

TM03 0265 3605

5.2 Positional requirements

WARNING


Crushing of hands



Death or serious personal injury
 - If the pump is to be installed in a position where it is accessible, the coupling must be suitably isolated from human touch. The pump can for instance be built into a flow sleeve.

Depending on motor type, the pump can be installed either vertically or horizontally. A complete list of motor types suitable for horizontal installation is shown in section 5.2.1 *Motors suitable for horizontal installation*.

If the pump is installed horizontally, the outlet port must never fall below the horizontal plane. See fig. 6.

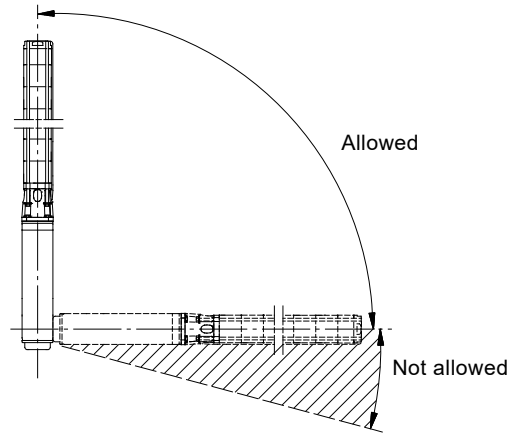

TM00 1355 5092

Fig. 6 Positional requirements

If the pump is installed horizontally, e.g. in a tank, we recommend that you fit it in a flow sleeve.

5.2.1 Motors suitable for horizontal installation

Motor	Output power 50 Hz	Output power 60 Hz
	[kW]	[kW]
MS	All	All
MMS6	5.5 - 37	5.5 - 37
MMS8000	22-92	22-92
MMS10000	75-170	75-170
MMS12000	147-190	

CAUTION

Hot surface



Minor or moderate personal injury
 - If the pump is used for pumping hot liquids (40 to 60 °C), make sure that persons cannot come into contact with the pump and the installation, e.g. by installing a guard.



During operation, the suction interconnector of the pump must always be completely submerged in the liquid. Make sure that the NPSH values are fulfilled.

5.3 Pump/motor diameter

We recommend that you check the borehole with an inside calliper to ensure unobstructed passage.

5.4 Liquid temperatures and motor cooling

The maximum liquid temperature and the minimum flow velocity past the motor appear from the following table.

Grundfos recommends installing the motor above the well screen in order to achieve proper motor cooling via liquid passing the motor.



In cases where the stated flow velocity cannot be achieved, a flow sleeve must be installed.

If there is a risk of sediment build-up, such as sand, around the motor, a flow sleeve should be used in order to ensure proper cooling of the motor.

Motor	Flow past the motor [m/s]	Installation		
		Vertical	Horizontal	
MS402 MS4000 (T40) MS6000 (T40)	0.15	40 °C (105 °F)	40 °C (105 °F)	
MS6000P (T60)	0.15	60 °C (140 °F)	60 °C (140 °F)	
MS4000I (T60)¹ MS6000 (T60)¹	1.00	60 °C (140 °F) Flow sleeve recommended	60 °C (140 °F) Flow sleeve recommended	
MS6000 (T60)²	0.15	60 °C (140 °F) Flow sleeve recommended	60 °C (140 °F) Flow sleeve recommended	
MMS6	PVC windings	0.20	25 °C (86 °F)	25 °C (86 °F)
		0.50	30 °C (95 °F)	30 °C (95 °F)
	PE/PA windings	0.20	45 °C (113 °F)	45 °C (113 °F)
MMS 8000 to 12000	PVC windings	0.15	25 °C (77 °F)	25 °C (77 °F)
		0.50	30 °C (86 °F)	30 °C (86 °F)
	PE/PA windings	0.15	40 °C (104 °F)	40 °C (104 °F)
		0.50	45 °C (113 °F)	45 °C (113 °F)

¹ At an ambient pressure of minimum 1 bar (0.1 MPa).

² At an ambient pressure of minimum 2 bar (0.2 MPa).

5.4.1 Flow velocity formula

$$V = \frac{Q \times 353}{D^2 - d^2} \text{ [m/s]}$$

Q	m ³ /h	Flow rate
D	mm	Sleeve diameter or borehole diameter
d	mm	Pump diameter



For 37 kW MMS6 (only PVC windings), 110 kW MMS8000 and 170 kW MMS10000, the maximum liquid temperature is 5 °C lower than the values stated in the above table. For 190 kW MMS10000, 220-250 kW MMS12000/50 Hz and MMS12000/60 Hz, the temperature is 10 °C lower.

5.5 Pipe connection

If noise may be transmitted to the building through the pipes, we recommend that you use plastic pipes.



Plastic pipes are recommended for 4" pumps only.

When using plastic pipes, secure the pump by an unloaded straining wire.

WARNING

Hot liquid



Death or serious personal injury

- Use pipes designed for the maximum pump pressure plus 10 % to avoid pipe burst.
- Make sure that the plastic pipes are suitable for the actual liquid temperature.

When connecting plastic pipes, use a compression coupling between the pump and the first pipe section.

6. Electrical connection

DANGER

Electric shock



Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

DANGER

Electric shock



Death or serious personal injury

- The pump must be earthed.
- The pump must be connected to an external main switch and shall be provided with a means permitting it to be locked in the OFF (isolated) position. Type and requirements as specified in EN 60204-1, 5.3.2



The electrical connection must be carried out by an authorised person in accordance with local regulations.

The supply voltage, rated maximum current and $\cos \phi$ appear from the separate name plate which must be fitted close to the installation site.

The required voltage quality for MS and MMS motors, measured at the motor terminals, is $-10\%/+6\%$ of the nominal voltage during continuous operation (including variation in the supply voltage and losses in cables).

Check also that there is voltage symmetry in the power supply lines, i.e. same difference of voltage between the individual phases. See section , item 2.

If MS motors with a built-in temperature transmitter (Tempcon) are not installed together with an MP 204 motor protection unit, they must be connected to a $0.47 \mu\text{F}$ capacitor approved for phase-phase operation (IEC 384-14) to meet the EC EMC directive (2004/108/EC). The capacitor must be connected to the two phases to which the temperature transmitter is connected. See fig. 7.

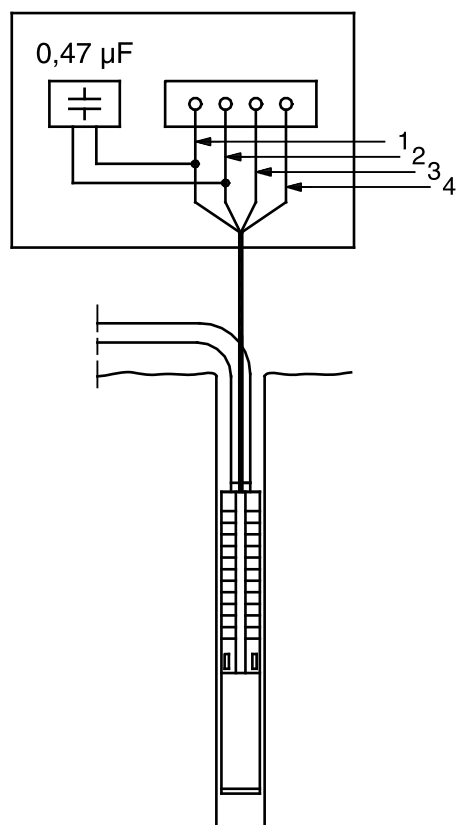


Fig. 7 Connection of capacitor

Colours of the conductors

Conductor	Flat cable	Single conductors
1 = L1	Brown	Black
2 = L2	Black	Yellow
3 = L3	Grey	Red
4 = PE	Yellow and green	Green

The motors are wound for direct-on-line starting or star-delta starting, and the starting current is between four and six times the rated current of the motor.

The run-up time of the pump is only about 0.1 second. Direct-on-line starting is therefore normally approved by the power supply company.

6.1 Motor protection

6.1.1 Single-phase motors

Single-phase MS402 motors incorporate a thermal switch and require no additional motor protection. As an exception, the 1.1 kW (1.5 hp) MS402 requires external current protection.

DANGER

Electric shock



- Death or serious personal injury
- Switch off the power supply before starting any work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

DANGER

Electric shock



- Death or serious personal injury
- The pump must be connected to protective earth.
 - Switch off the power supply before starting any work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

Single-phase MS4000 motors must be protected. A protective device can either be incorporated in a control box or be separate.

6.1.2 Three-phase motors

MS motors are available with or without a built-in temperature transmitter.

Motors with a built-in and operational temperature transmitter must be protected by:

- a motor-protective circuit breaker with thermal relay or
- an MP 204 motor protection unit and contactor(s).

Motors with or without a non-operational temperature transmitter must be protected by:

- a motor-protective circuit breaker with thermal relay or
- an MP 204 motor protection unit and contactor(s).

MMS motors have no built-in temperature transmitter. A Pt100 sensor is available as an accessory.

Motors with a Pt100 sensor must be protected by the following:

- a motor-protective circuit breaker with thermal relay or
- an MP 204 motor protection unit and contactor(s).

Motors without a Pt100 sensor must be protected by the following:

- a motor-protective circuit breaker with thermal relay with max. trip class 10 according to IEC 60947-4-1 or
- an MP 204 motor protection unit and contactor(s).

6.1.3 Required settings of motor-protective circuit breaker

For motors with an MP 204 motor protection unit, Grundfos recommends using a special trip curve with P-characteristics at a setting of U_n times 5 for 1 second.

For cold motors, the tripping time for the motor-protective circuit breaker must be less than 10 seconds at five times the rated maximum current of the motor.

For all Grundfos submersible MMS motors, the maximum start and stop ramp time is 3 seconds (minimum 30 Hz).



If this requirement is not met, the motor warranty will be invalidated.

In order to ensure optimum protection of the submersible motor, set the motor-protective circuit breaker in accordance with the following:

1. Set the motor-protective circuit breaker to the rated maximum current of the motor.
2. Start the pump and let it run for half an hour at normal performance.
3. Slowly grade down the scale indicator until the motor trip point is reached.
4. Increase the setting by 5 %.

The highest permissible setting is the rated maximum current of the motor.

For motors wound for star-delta starting, the motor-protective circuit breaker must be set as above, but the maximum setting must be rated maximum current x 0.58.

The highest permissible startup time for star-delta starting or autotransformer starting is 2 seconds.

6.2 Lightning protection

The installation can be fitted with a special overvoltage protection device to protect the motor from voltage surges in the power supply lines if lightning strikes somewhere in the area. See fig. 8

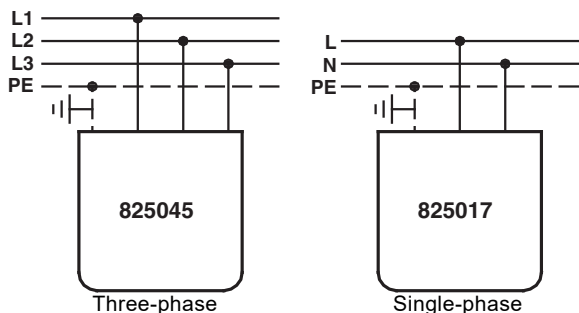


Fig. 8 Connecting an overvoltage protective device

The overvoltage protective device will not, however, protect the motor against a direct stroke of lightning.

Connect the overvoltage protective device to the installation as close as possible to the motor and always in accordance with local regulations. Ask Grundfos for lightning protective devices.

MS402 motors, however, require no further lightning protection as they are highly insulated.

6.3 Cable sizing



Submersible motor cables are dimensioned for submersion in liquid, and will not necessarily have sufficient cross-section to be in free air.

Make sure that the submersible drop cable can withstand permanent submersion in the actual liquid and at the actual temperature.

The cross-section (q) of the cable must meet the following requirements:

- The submersible drop cable must be sized to the rated maximum current of the motor.
- The cross-section must be sufficient to make a voltage drop over the cable acceptable.

Grundfos supplies submersible drop cables for a wide range of installations. A cable sizing tool is available on Grundfos Insite at: <https://www.grundfos.com/sp-system/download-sp-app.html>.



Fig. 9 Cable sizing tool

The sizing tool provides an accurate calculation of the voltage drop at a given cross-section on the basis of the following parameters:

- cable length
- operating voltage
- full-load current
- power factor
- ambient temperature.

The voltage drop can be calculated both for direct-on-line and star-delta starting.

In order to minimise operating losses, the cable cross-section may be increased. This is only cost-efficient if the borehole provides the necessary space, and if the operating time of the pump is long. The cable sizing tool also provides a power loss calculator that shows the potential savings of an increased cross-section.

As an alternative to the cable sizing tool, select the cross-section on the basis of the current values of the given cables.

The cross-section of the submersible drop cable must be large enough to meet the voltage quality requirements specified in section 6. *Electrical connection*.

Determine the voltage drop for the cross-section of the submersible drop cable by means of the diagrams on pages 20 to 23.

Use the following formula:

I: rated maximum current of the motor.

For star-delta starting, I is equal to the rated maximum current of the motor x 0.58.

Lx: length of cable converted to a voltage drop of 1 % of the nominal voltage.

$$Lx = \frac{\text{length of drop cable}}{\text{permissible voltage drop in \%}}$$

q: cross-section of submersible drop cable.

Draw a straight line between the actual I-value and the Lx-value. Where the line intersects the q-axis, select the cross-section that lies right above the intersection.

The diagrams are made on the basis of the formulas:

Single-phase submersible motor

$$L = \frac{U \times \Delta U}{I \times 2 \times 100 \times \left(\cos \varphi \times \frac{\rho}{q} + \sin \varphi \times XI \right)}$$

Three-phase submersible motor

$$L = \frac{U \times \Delta U}{I \times 1.73 \times 100 \times \left(\cos \varphi \times \frac{\rho}{q} + \sin \varphi \times XI \right)}$$

- L Length of submersible drop cable [m]
- U Rated voltage [V]
- ΔU Voltage drop [%]
- I Rated maximum current of the motor [A]
- cos φ 0.9
- ρ Specific resistance: 0.025 [Ωmm²/m]
- q Cross-section of submersible drop cable [mm²]
- sin φ 0.436
- XI Inductive resistance: 0.078 x 10⁻³ [Ω/m].

6.4 Control of single-phase MS402 motors



The single-phase MS402 motors smaller than 1.1 kW incorporate motor protection which cuts out the motor in case of excessive winding temperatures while the motor is still supplied with voltage. Allow for this, when the motor forms part of a control system.

If a compressor is included in a control system together with an ochre filter, the compressor will run continuously once the motor protection has cut out the motor, unless other special precautions have been taken.

6.5 Connection of single-phase motors

6.5.1 2-wire motors

MS402 2-wire motors incorporate motor protection and a starter device and can therefore be connected direct to the mains. See fig. 10.

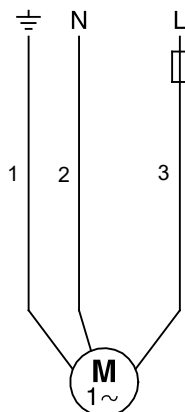


Fig. 10 2-wire motors

1	Yellow and green
2	Blue
3	Brown

6.5.2 PSC motors

The PSC motors are connected to the mains via a run capacitor which must be sized for continuous operation.

Select the correct capacitor size from the table below:

Motor [kW]	Capacitor [μ F] 400 V, 50 Hz
0.25	12.5
0.37	16
0.55	20
0.75	30
1.10	40
1.50	50
2.20	75

MS402 PSC motors smaller than 1.1 kW incorporate motor protection and must be connected to the mains as shown in fig. 11.

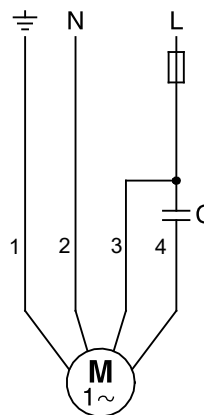


Fig. 11 PSC motors

1	Yellow and green
2	Grey
3	Brown
4	Black

6.5.3 3-wire motors

MS402 3-wire single-phase motors incorporate motor protection and must be connected to the mains via a Grundfos control box SA-SPM 50 Hz or 60 Hz without motor protection.

MS4000, MS6000 3-wire single-phase motors must be connected to the mains via a Grundfos SA-SPM 50 Hz or 60 Hz control box incorporating motor protection.

When a conventional motor-protective circuit breaker is used, the electrical connection must be carried out as described below.

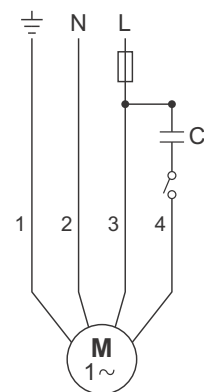


Fig. 12 CSIR

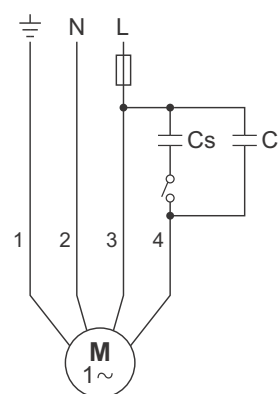


Fig. 13 CSCR

TM00 1359 5092

TM00 1358 5092

TM07 4264 1219

TM07 4265 1219

6.6 Connection of three-phase motors

Three-phase motors must be protected. See section 6.1.2 *Three-phase motors*.

For electrical connection via the MP 204, see the separate installation and operating instructions for this unit.

When a conventional motor-protective circuit breaker is being used, the electrical connection must be carried out as described below.

6.6.1 Motors wound for direct-on-line starting

The connection of Grundfos submersible motors wound for direct-on-line starting appears from the table below and fig. 14.

Mains	Cable/connection
	Grundfos 4" and 6" motors
PE	PE (yellow and green)
L1	U (brown)
L2	V (black)
L3	W (grey)

Check the direction of rotation as described in section 6.6 *Connection of three-phase motors*.

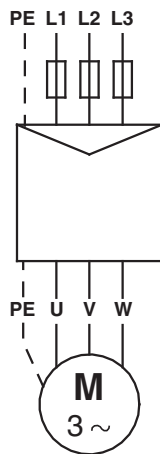


Fig. 14 Grundfos motors - direct-on-line starting

TM03 2099 3705

6.6.2 Motors wound for star-delta starting

The connection of Grundfos submersible motors wound for star-delta starting appears from the table below and fig. 15.

Connection	Grundfos 6" motors
PE	Yellow and green
U1	Brown
V1	Black
W1	Grey
W2	Brown
U2	Black
V2	Grey

Check the direction of rotation as described in section 6.6 *Connection of three-phase motors*.

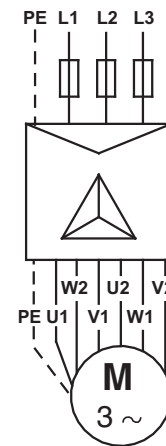


Fig. 15 Grundfos motors wound for star-delta starting

If direct-on-line starting is required, the motors must be connected as shown in fig. 16.

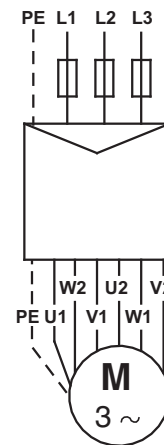


Fig. 16 Grundfos motors wound for star-delta starting - direct-on-line starting

TM03 2100 3705

TM03 2101 3705

6.6.3 MS6000P Synchronous motors requiring double cabling

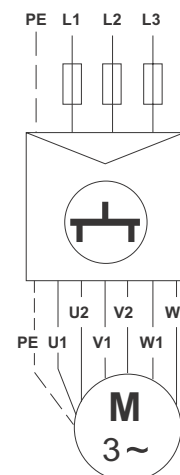


Fig. 17 Grundfos MS6000P 37 kW and 45 kW

TM07 6468 1920

6.6.4 Connection in the case of unidentified cable marking/connection

If it is unknown where the individual conductors are to be connected to the mains in order to ensure the correct direction of rotation, proceed as follows:

Motors wound for direct-on-line starting

Connect the pump to the mains as is expected to be right. Then check the direction of rotation as described in section [6.6 Connection of three-phase motors](#).

Motors wound for star-delta starting

Determine the windings of the motor by means of an ohmmeter and name the conductor sets for the individual windings accordingly: U1-U2, V1-V2, W1-W2. See fig. 18.

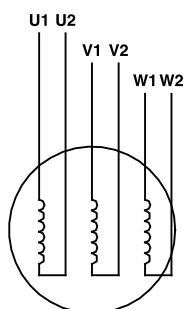


Fig. 18 Unidentified cable marking/connection - motors wound for star-delta starting

If star-delta starting is required, connect the conductors as shown in fig. 15.

If direct-on-line starting is required, connect the conductors as shown in fig. 16.

Then check the direction of rotation as described in section [6.6 Connection of three-phase motors](#).

6.6.5 Checking the direction of rotation



The pump must not be started until the suction interconnector has been completely submerged in the liquid.

When the pump has been connected to the power supply, check the direction of rotation:

1. Start the pump and measure quantity of water and head.
2. Stop the pump and interchange two phases.
3. Start the pump and measure quantity of water and head.
4. Stop the pump.
5. Compare the two results. The connection giving the larger quantity of water and the higher head is the correct one.

6.6.6 Soft starter

Grundfos only recommends the use of soft starters which control the voltage on all three phases and which are provided with a bypass switch.

Ramp times: Maximum 3 seconds.

For further details, contact your soft starter supplier or Grundfos.

6.6.7 Frequency converter operation

Three-phase MS motors can be connected to a frequency converter.



During frequency converter operation, it is not advisable to run the motor at a frequency higher than the rated frequency (50 or 60 Hz). In connection with pump operation, it is important never to reduce the frequency (and consequently the speed) to such a level that the necessary flow of cooling liquid past the motor is no longer ensured.



To ensure the monitoring of the motor temperature, Grundfos recommends that P100 or P1000 sensor is installed.



If an MS motor with temperature transmitter is connected to a frequency converter, a fuse incorporated in the transmitter will melt and the transmitter will be inactive. The transmitter cannot be reactivated. This means that the motor will operate like a motor without a temperature transmitter.

To avoid damage to the pump part, make sure that the motor stops when the pump flow falls below 0.1 x rated flow.

Voltage peaks for Grundfos submersible motors should be limited in accordance with the table below.

Motor type	Max. U peak voltage	Max. dU/dt
MS402	650 V phase-phase	2000 V/ μ s
MS4000	850 V phase-phase	2000 V/ μ s
MS6000 and MS6000P	850 V phase-phase	2000 V/ μ s
MMS6	850 V phase-ground	500 V/ μ s
MMS8000	850 V phase-ground	500 V/ μ s
MMS10000	850 V phase-ground	500 V/ μ s
MMS12000	850 V phase-ground	500 V/ μ s

For asynchronous motors:

Permissible frequency ranges:

- 30-50 Hz
- 30-60 Hz.

Ramp times: Maximum 3 seconds from standstill to minimum frequency and vice versa

For synchronous motors MS6000P:

Permissible frequency ranges:

- 55-100 Hz
- 55-120 Hz.

Ramp times: Maximum 3 seconds from standstill to minimum frequency and vice versa

Depending on the type, the frequency converter may cause increased acoustic noise from the motor. Furthermore, it may expose the motor to detrimental voltage peaks. This can be abated by installing an LC filter or even better a sinus filter between the frequency converter and the motor.

For further details, contact your frequency converter supplier or Grundfos.

7. Setting up the CUE frequency converter in an SPE system

The SPE system consists of the following:

- SPE pump set
- sine-wave filter
- CUE frequency converter.

The CUE has a start up guide. Follow the instructions on the display.

For further information regarding safety and advanced settings see the CUE Installation and operating instruction.



Installation and operating instructions

<http://net.grundfos.com/qr/i/98870684>

8. Mechanical installation

WARNING

Sharp element



Death or serious personal injury

- When mounting the facilitating pipe, wear personal protective equipment to avoid cutting on sharp edges on the pump.



Be careful not to bend or damage long pump sets, when moving them from horizontal to vertical positions.

8.1 Removing and fitting the cable guard

The cable guard is screwed on to the pump, it must be removed and fitted by means of screws. See appendix.



Make sure that the pump chambers are aligned when the cable guard has been fitted.

8.2 Fitting of the submersible drop cable and motor cable

Before connecting the submersible drop cable to the motor, make sure that the cable socket is clean and dry.

To facilitate the connection of the cable, lubricate the rubber parts of the cable plug with non-conducting silicone paste.

Tighten the screws holding the cable to the torques stated [Nm]:

MS402:	3.1 Nm
MS4000:	3.0 Nm
MS6000:	4.5 Nm
MMS6:	20 Nm
MMS8000:	18 Nm
MMS10000:	18 Nm
MMS12000:	15 Nm.

Connect the motor cable to the drop cable by use of original Grundfos cable termination kits, such as shrink tube type KM or cable termination kit type M0 to M4.

If necessary, shorten the motor cable to ensure that it is always covered with pump medium prior to making the cable jointing as described above.

Staybolt diameter	Torque [Nm]
5/16 UNF	18
1/2 UNF	50
M8	18
M12	70
M16	150
M20	280

Fig. 19 Staybolt diameters and torques

8.3 Lifting the product

Grundfos recommends to fit a maximum 30 cm long pipe to the pump to facilitate handling of the pump during installation.

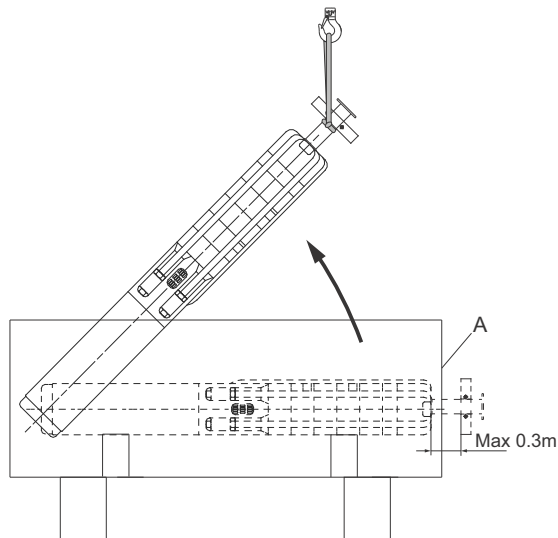


Fig. 20 Lifting the pump set into vertical position

Lift the pump set by means of pipe clamps fitted to the riser pipe. See fig. 21.

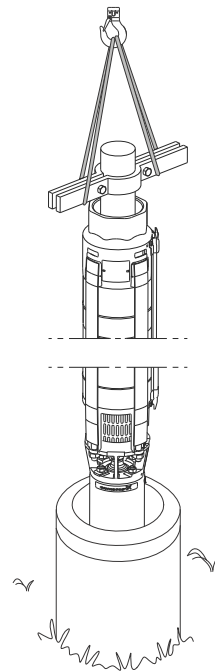


Fig. 21 Lifting the pump set into position

TM07 6517 2220

TM07 6518 2202

8.4 Riser pipe

WARNING

Sharp element

Death or serious personal injury

- When mounting the riser pipe, wear personal protective equipment to avoid cutting on sharp edges on the pump.



If a tool, for example a chain pipe wrench, is used when the riser pipe is fitted to the pump, the pump must only be gripped by the pump outlet chamber.

The threaded joints on the riser pipe must all be well cut and fit together to ensure that they do not work loose when subjected to torque reaction caused by the starting and stopping of the pump.

The thread on the first section of the riser pipe, which is to be screwed into the pump, must not be longer than the threads in the pump.



Plastic pipes are recommended for 4" pumps only.

When plastic pipes are used, secure the pump by an unloaded straining wire to be fastened to the outlet chamber of the pump. See fig. 22.

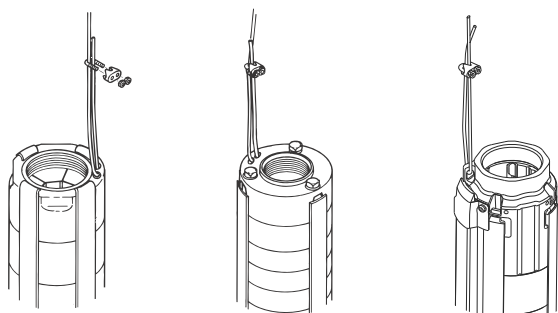


Fig. 22 Fixing the straining wire

When connecting plastic pipes, use a compression coupling between the pump and the first pipe section.

From 6" to 10" there is no hook or connection eye for straining wire.

When flanged pipes are used, the flanges must be slotted to take the submersible drop cable and a water indicator hose, if fitted.

Maximum installation pressure [mWC]

Grundfos MS402:	150
Grundfos MS4000:	600
Grundfos MS6000:	600
Grundfos MS6000P:	300
Grundfos MMS:	600

8.5 Placing in borehole



WARNING

Crushing of hands and feet

Death or serious personal injury

- Stay clear of the wire and cable during placement in borehole.



8.6 Cable clips

Fit cable clips every 3 metres to fix the submersible drop cable and the straining wire, if fitted, to the riser pipe of the pump.

Grundfos supplies cable clip sets on request.

1. Cut off the rubber band so that the piece with no slit becomes as long as possible.
2. Insert a button in the first slit.

3. Position the wire alongside the submersible drop cable as shown in fig. 23.

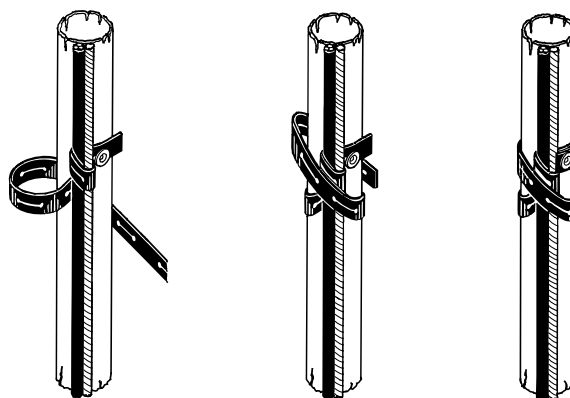


Fig. 23 Fitting the cable clips

4. Wind the band once around the wire and the cable. Then wind it tightly at least twice around the pipe, wire and cable.
5. Push the slit over the button, and cut off the band.

When cables with a large cross-section are used, it will be necessary to wind the band several times.

When plastic pipes are used, some slackness must be left between each cable clip as plastic pipes expand when loaded.

When flanged pipes are used, the cable clips must be fitted above and below each joint.

8.7 Lowering the pump

DANGER

Electric shock

Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.



Do not lower or lift the pump by means of the motor cable.

Grundfos recommends checking the borehole by means of an inside calliper before lowering the pump to ensure unobstructed passage.

Lower the pump carefully into the borehole, taking care not to damage the motor cable and the submersible drop cable.

8.8 Installation depth

The dynamic water level must always be above the suction interconnector of the pump. See section 5.2 [Positional requirements](#) and fig. 24.

Minimum inlet pressure is indicated in the NPSH curve for the pump. The minimum safety margin must be 0.5 metre head.

We recommend that you install the pump so that the motor part is above the well screen in order to ensure optimum cooling. See section 5.4 [Liquid temperatures and motor cooling](#).

When the pump has been installed to the required depth, the installation must be finished by means of a borehole seal.

Loosen the straining wire so that it becomes unloaded and lock it to the borehole seal by means of wire locks.



For pumps fitted with plastic pipes, the expansion of the pipes when loaded must be taken into consideration, when deciding on the installation depth of the pump.

9. Startup and operation

DANGER

Electric shock



Death or serious personal injury

- The pump must be connected to protective earth.
- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

9.1 Startup


When the pump has been connected correctly and it is submerged in the liquid to be pumped, it must be started with the outlet valve closed off to approximately 1/3 of its maximum volume of water.

Check the direction of rotation as described in section [6.6 Connection of three-phase motors](#).

If there are impurities in the water, open the valve gradually as the water becomes clearer. Do not stop the pump until the water is completely clean, as otherwise the pump parts and the non-return valve may become blocked.

As the valve is being opened, check the drawdown of the water level to ensure that the pump always remains submerged.

The dynamic water level must always be above the suction interconnector of the pump. See section [5.2 Positional requirements](#) and fig. 24.

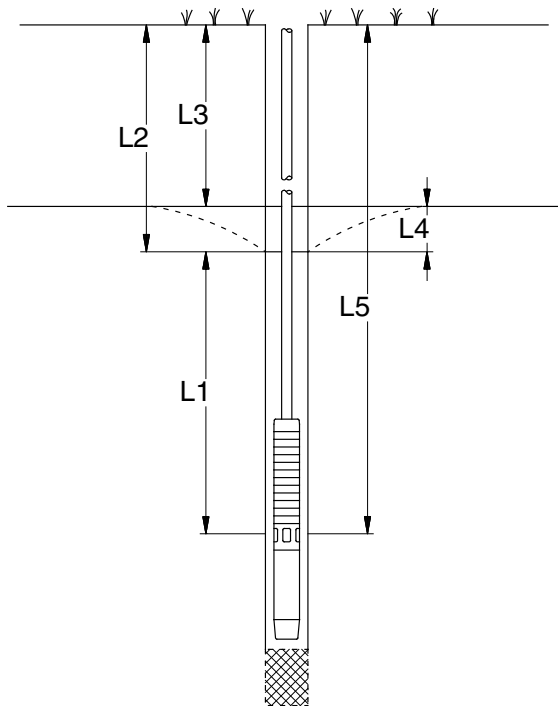

TM00 1041 3695

Fig. 24 Comparison of various water levels

- L1: Minimum installation depth below dynamic water level. We recommend minimum 0.5 m or according to NPSH - curve for the relevant pump.
- L2: Depth to dynamic water level.
- L3: Depth to static water level.
- L4: Drawdown. This is the difference between the dynamic and the static water levels.
- L5: Installation depth.

If the pump can pump more than yielded by the well, we recommend that you install the Grundfos MP 204 motor protector or some other type of dry-running protection.

If no water level electrodes or level switches are installed, the water level may be drawn down to the suction interconnector of the pump and the pump will then draw in air.



Long time of operation with water containing air may damage the pump and cause insufficient cooling of the motor.

9.2 Operation

9.2.1 Minimum flow rate

To ensure the necessary cooling of the motor, the pump flow velocity must never be set so low that the cooling requirements in section [5.4 Liquid temperatures and motor cooling](#) cannot be met.

9.2.2 Operating range

The pump must never run outside the rated pump curve - see Data Booklet.

9.2.3 Frequency of starts and stops

Motor type	Number of starts
MS402	• Grundfos recommends minimum 1 per year.
	• Maximum 100 per hour.
	• Maximum 300 per day.
MS4000	• Grundfos recommends minimum 1 per year.
	• Maximum 100 per hour.
	• Maximum 300 per day.
MS6000	• Grundfos recommends minimum 1 per year.
	• Maximum 30 per hour.
	• Maximum 300 per day.
MS6000P	• Grundfos recommends minimum 1 per year.
	• Maximum 120 per hour.
	• Maximum 360 per day.
MMS6	• Grundfos recommends minimum 1 per year.
	• Maximum 3 per hour.
	• Maximum 40 per day.
MMS6	• Grundfos recommends minimum 1 per year.
	• Maximum 10 per hour.
	• Maximum 70 per day.
MMS8000	• Grundfos recommends minimum 1 per year.
	• Maximum 3 per hour.
	• Maximum 30 per day.
MMS8000	• Grundfos recommends minimum 1 per year.
	• Maximum 8 per hour.
	• Maximum 60 per day.
MMS10000	• Grundfos recommends minimum 1 per year.
	• Maximum 2 per hour.
	• Maximum 20 per day.
MMS10000	• Grundfos recommends minimum 1 per year.
	• Maximum 6 per hour.
	• Maximum 50 per day.
MMS12000	• Grundfos recommends minimum 1 per year.
	• Maximum 2 per hour.
	• Maximum 15 per day.
MMS12000	• Grundfos recommends minimum 1 per year.
	• Maximum 5 per hour.
	• Maximum 40 per day.

10. Service

All pumps are easy to service.

Service kits and service tools are available from Grundfos.

The pumps can be serviced at a Grundfos service centre.

If Grundfos is requested to service the pump, Grundfos must be contacted with details about the pumped liquid, etc. before the pump is returned for service. Otherwise Grundfos can refuse to accept the pump for service.

Possible costs of returning the pump are paid by the customer.

Additional service documentation including service videos are available in Grundfos Product Center >

<http://product-selection.grundfos.com/>.

DANGER

Electric shock



- Death or serious personal injury
- Switch off the power supply before starting any work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

DANGER

Toxic or radio active liquid



- Death or serious personal injury
- If a pump has been used for a liquid which is injurious to health or toxic, the pump will be classified as contaminated.

WARNING

Sharp element



- Death or serious personal injury
- For service - see service instructions. Must be performed by qualified persons.

10.1 SPE

The following is only valid for SPE pump sets.

DANGER

Magnetic field



- Death or serious personal injury
- Do not handle the rotor if having a pacemaker.

DANGER

Crushing of hands



- Death or serious personal injury
- Keep the rotor surroundings free of magnetic objects and be careful when placing the rotor on a magnetic surface.

DANGER

Electric shock



- Death or serious personal injury
- Make sure that motor cable ends are not live before starting work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

In case of unintended flow of water through a non-energized pump there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Due to this the motor terminals must be considered as live until proven otherwise.

11. Fault finding

DANGER

Electric shock



- Death or serious personal injury
- Switch off the power supply before starting any work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

DANGER

Toxic or radio active liquid



- Death or serious personal injury
- If a pump has been used for a liquid which is injurious to health or toxic, the pump will be classified as contaminated.

11.1 SPE

The following is only valid for SPE pump sets.

DANGER

Magnetic field



- Death or serious personal injury
- Do not handle the rotor if having a pacemaker.

DANGER

Crushing of hands



- Death or serious personal injury
- Keep the rotor surroundings free of magnetic objects and be careful when placing the rotor on a magnetic surface

DANGER

Electric shock



- Death or serious personal injury
- Make sure that motor cable ends are not live before starting work on the product.
 - Make sure that the power supply cannot be accidentally switched on.

In case of unintended flow of water through a non-energized pump there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Due to this the motor terminals must be considered as live until proven otherwise.

Fault	Cause	Remedy
1. The pump does not run.	a) The fuses are blown.	Replace the blown fuses. If the new ones blow too, check the electric installation and the submersible drop cable.
	b) The ELCB or the voltage-operated ELCB has tripped.	Cut in the circuit breaker.
	c) No power supply.	Contact the power supply company.
	d) The motor-protective circuit breaker has tripped.	Reset the motor-protective circuit breaker (automatically or possibly manually). Check the voltage if it trips again. If the voltage is okay, see items 1 e) to 1 h).
	e) The motor-protective circuit breaker or the contactor is defective.	Replace the motor-protective circuit breaker or the contactor.
	f) Starter device is defective.	Repair or replace the starter device.
	g) The control circuit has been interrupted or is defective.	Check the electric installation.
	h) The dry-running protection has cut off the power supply to the pump due to low water level.	Check the water level. If it is okay, check the water level electrodes or level switches.
	i) The pump or the submersible drop cable is defective.	Repair or replace the pump or cable.
2. The pump runs but gives no water.	a) The outlet valve is closed.	Open the valve.
	b) No water or too low water level in borehole.	See item 3 a).
	c) The non-return valve is stuck in closed position.	Pull out the pump and clean or replace the valve.
	d) The inlet strainer is blocked.	Pull out the pump and clean the strainer.
	e) The pump is defective.	Repair or replace the pump.
3. The pump runs at reduced performance.	a) The drawdown is larger than anticipated.	Increase the installation depth of the pump, throttle the pump or install a pump with a smaller performance.
	b) Wrong direction of rotation.	See section 6.6 Connection of three-phase motors .
	c) The valves in the outlet pipe are partly closed or blocked.	Clean or replace the valves.
	d) The outlet pipe is partly blocked by impurities (ochre).	Clean or replace the pipe.
	e) The non-return valve of the pump is partly blocked.	Pull out the pump and clean or replace the valve.
	f) The pump and the riser pipe are partly blocked by impurities (ochre).	Pull out the pump and clean or replace it. Clean the pipes.
	g) The pump is defective.	Repair or replace the pump.
	h) Leakage in the pipes.	Check and repair the pipes.
	i) The riser pipe is defective.	Replace the pipe.
4. Frequent starts and stops.	a) The difference between the start and stop pressures is too small.	Increase the difference. The stop pressure must not exceed the operating pressure of the pressure tank, and the start pressure must be high enough to ensure sufficient water supply.
	b) The water level electrodes or level switches in the reservoir have not been installed correctly.	Adjust the intervals of the electrodes or level switches to ensure suitable time between the cutting-in and cutting-out of the pump. See installation and operating instructions for the electrodes or level switches. If the intervals between stop and start cannot be changed via the automatics, the pump performance may be reduced by throttling the outlet valve.
	c) The non-return valve is leaking or stuck half-open.	Pull out the pump and clean or replace the valve.
	d) The precharge pressure of the tank is too low.	Adjust the precharge pressure of the tank in accordance with its installation and operating instructions.
	e) The tank is too small.	Increase the capacity of the tank by replacing it or supplementing it with an additional tank.
	f) The diaphragm of the tank is defective.	Check the diaphragm tank.

12. Checking motor and cable

DANGER

Electric shock



Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

12.1 SPE

The following is only valid for SPE pump sets.

DANGER

Electric shock




Death or serious personal injury

- Make sure that motor cables ends are not live before starting work on the product.
- Make sure that the power supply cannot be accidentally switched on.

In case of unintended flow of water through a non-energized pump there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Due to this the motor terminals must be considered as live until proven otherwise.

1. Supply voltage




TM00 1371 5092

Measure the voltage between the phases by means of a voltmeter. On single-phase motors, measure between phase and neutral or between two phases, depending on the type of supply. Connect the voltmeter to the terminals in the motor-protective circuit breaker.

The voltage must, when the motor is loaded, be within the range specified in section 6. *Electrical connection*. The motor may burn if there are larger variations in voltage. Large variations in voltage indicate poor power supply, and the pump must be stopped until the defect has been remedied.

2. Current consumption



TM00 1372 5092


Measure the amps of each phase while the pump is operating at a constant outlet head (if possible, at the performance where the motor is most heavily loaded). For maximum operating current, see nameplate.

On three-phase motors, the difference between the current in the phase with the highest consumption and the current in the phase with the lowest consumption must not exceed 5 %. If so, or if the current exceeds the rated current, there are the following possible faults:

- The contacts of the motor-protective circuit breaker are burnt. Replace the contacts or the control box for single-phase operation.
- Poor connection in conductors, possibly in the cable joint. See item 3.
- Too high or too low supply voltage. See item 1.
- The motor windings are short-circuited or partly disjointed. See item 3.
- Damaged pump is causing the motor to be overloaded. Pull out the pump for overhaul.
- The resistance value of the motor windings deviates too much (three-phase). Move the phases in phase order to a more uniform load. If this does not help, see item 3.

Items 3 and 4: Measurement is not necessary when the supply voltage and the current consumption are normal.

3. Winding resistance

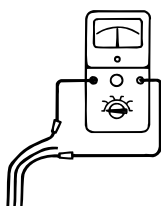


TM00 1373 5092

Disconnect the submersible drop cable from the motor-protective circuit breaker. Measure the winding resistance between the conductors of the drop cable.

For three-phase motors, the deviation between the highest and the lowest value must not exceed 10 %. If the deviation is higher, pull out the pump. Measure motor, motor cable and drop cable separately, and repair or replace defective parts.

Note: The operating winding of single-phase 3-wire motors will assume the lowest resistance value.

4. Insulation resistance

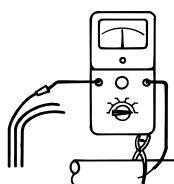

TM00 1374 5092

Disconnect the submersible drop cable from the motor-protective circuit breaker. Measure the insulation resistance from each phase to earth (frame). Make sure that the earth connection was made carefully.

If the insulation resistance is less than 0.5 MΩ, the pump must be pulled out for motor or cable repair.

Local regulations may specify other values for the insulation resistance.

13. Disposing of hazardous or toxic materials

DANGER

Toxic or radio active liquid



Death or serious personal injury

- If a pump has been used for a liquid which is injurious to health or toxic, the pump will be classified as contaminated.

14. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:


1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal

authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

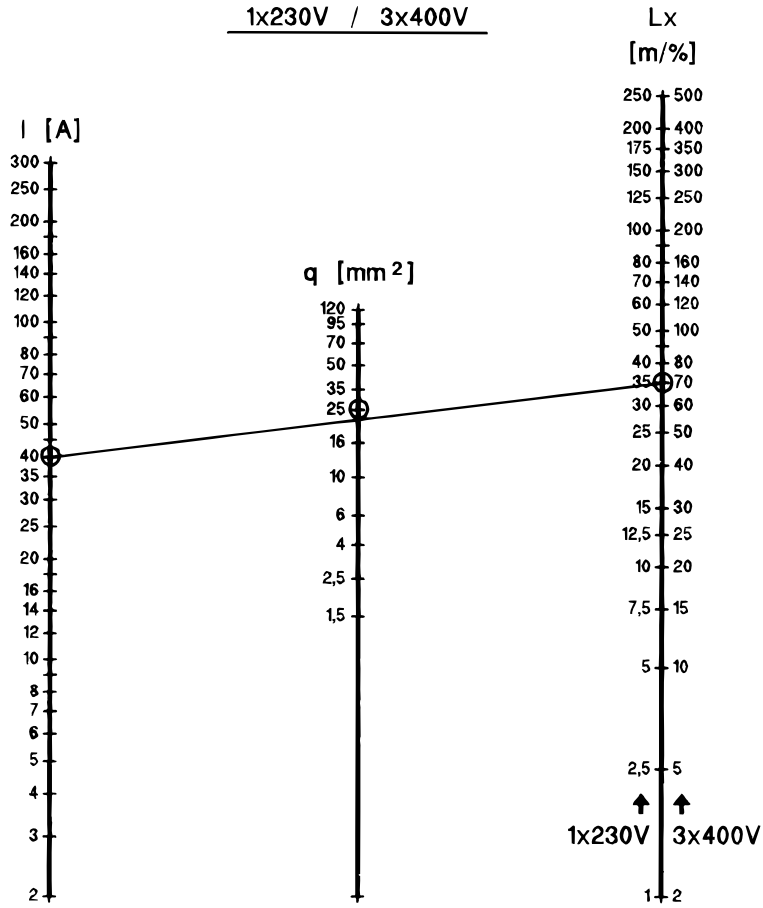


TM00 1346 5092

Example:

$U = 3 \times 400 \text{ V}$
 $I = 40 \text{ A}$
 $L = 140 \text{ m}$
 $\Delta U = 2 \%$


$Lx = \frac{L}{\Delta U} = \frac{140}{2\%} = 70 \text{ m} = q \Rightarrow 25 \text{ mm}^2$

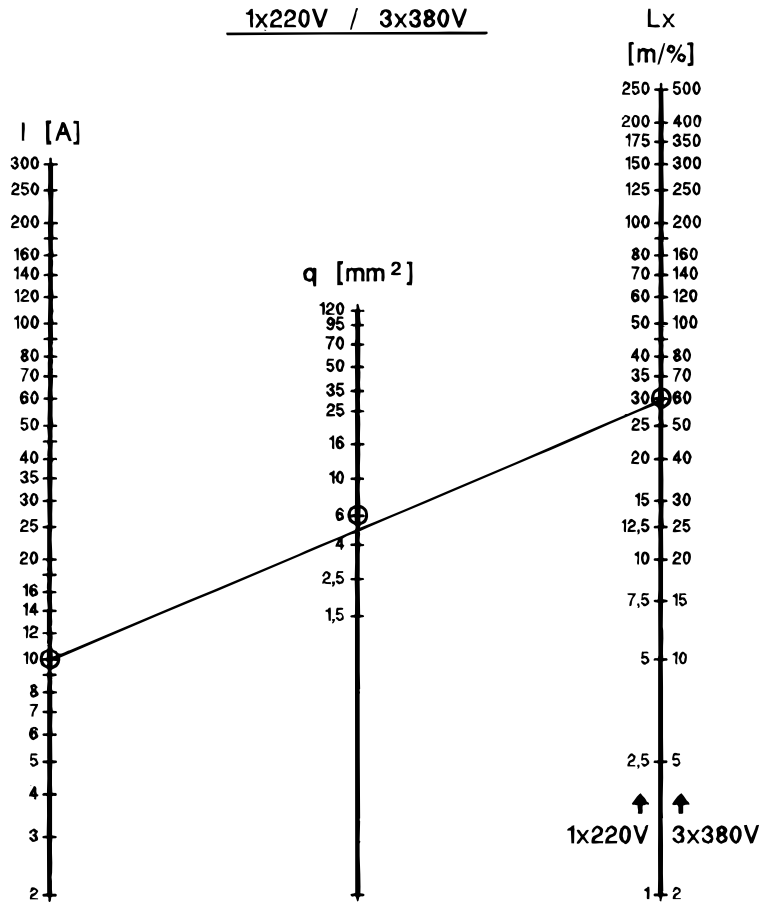

<p>Example:</p> <p> $U = 3 \times 380 \text{ V}$ $I = 10 \text{ A}$ $L = 120 \text{ m}$ $\Delta U = 2 \%$ </p> <p> $Lx = \frac{L}{\Delta U} = \frac{120}{2\%} = 60 \text{ m} = q \Rightarrow 6 \text{ mm}^2$ </p>	
--	--

TMM00 1345 5092

3x220V / 3x440V

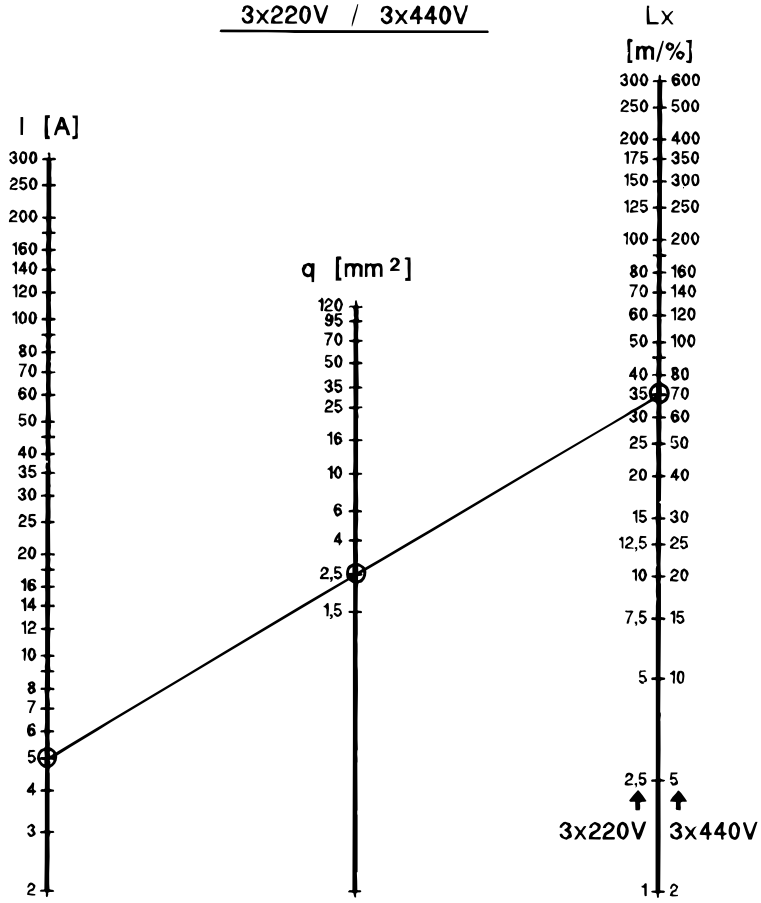


Example:

$U = 3 \times 220 \text{ V}$
 $I = 5 \text{ A}$
 $L = 105 \text{ m}$
 $\Delta U = 3 \%$

$Lx = \frac{L}{\Delta U} = \frac{105}{3\%} = 35 \text{ m} = q \Rightarrow 2,5 \text{ mm}^2$

TM00 1348 5092

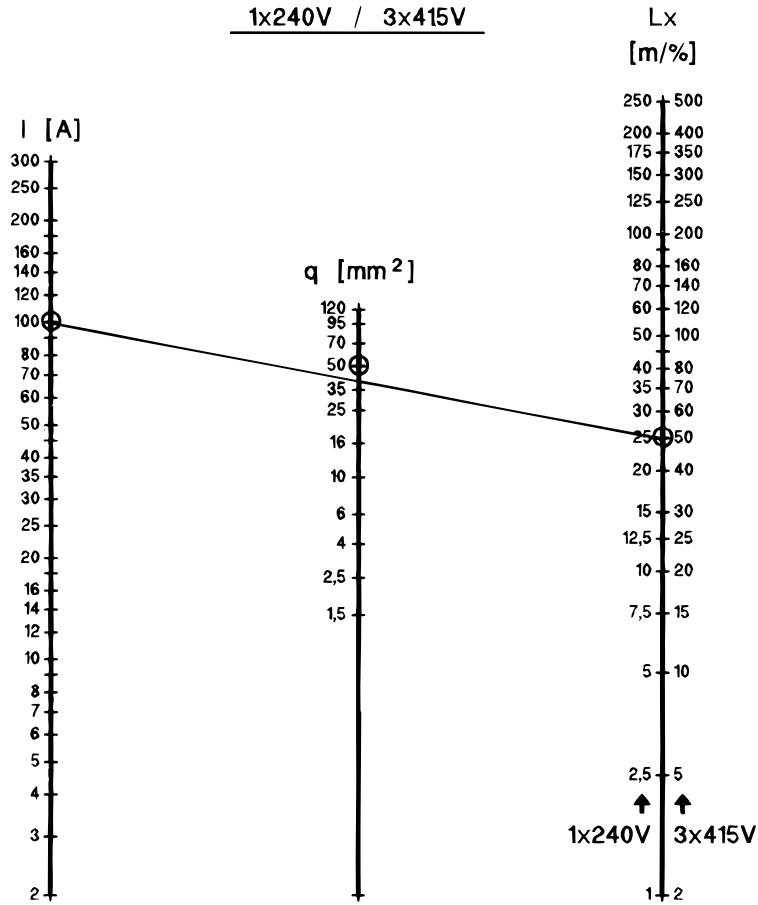

TM00 1347 5092

Example:

$U = 3 \times 415 \text{ V}$
 $I = 100 \text{ A}$
 $L = 150 \text{ m}$
 $\Delta U = 3 \%$

$L_x = \frac{L}{\Delta U} = \frac{150}{3\%} = 50 \text{ m} = q \Rightarrow 50 \text{ mm}^2$

$U = 3 \times 415 \text{ V}$

$I = 100 \text{ A}$
 $\Delta U = 3 \%$

$L = 150 \text{ m}$

SP1 - SP 2 - SP 3 - SP 5

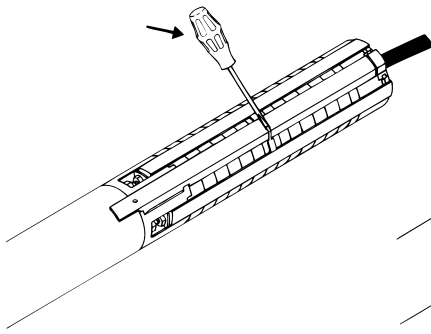


Fig. 1

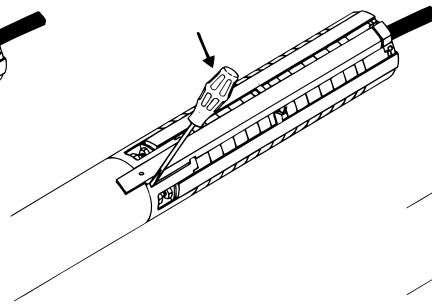


Fig. 2

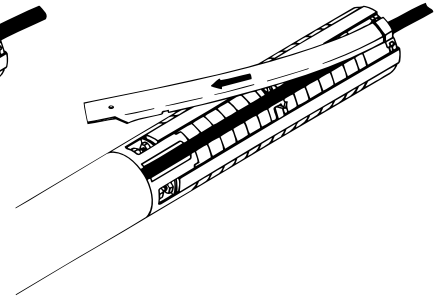


Fig. 3

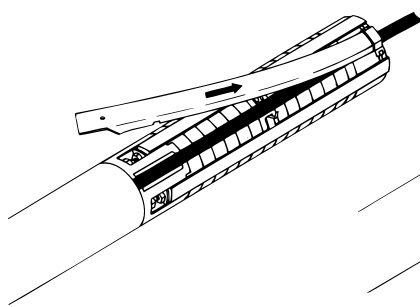


Fig. 1

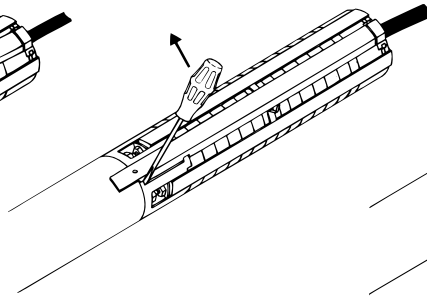


Fig. 2

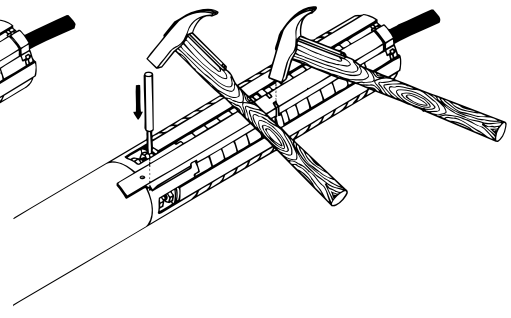


Fig. 3

TM00 1323 5092

SP 7 - SP 9 - SP 11 - SP 14 - SP 17 - SP 30 - SP 46 - SP 60

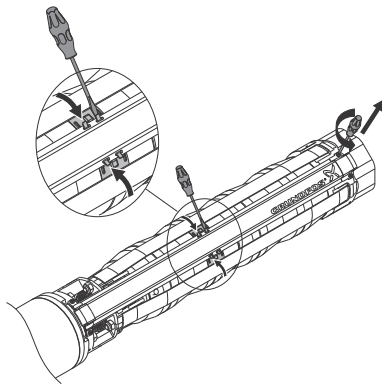


Fig. 1

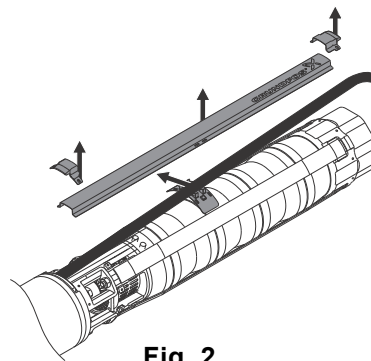


Fig. 2

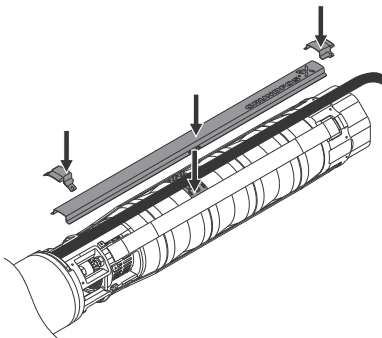


Fig. 1

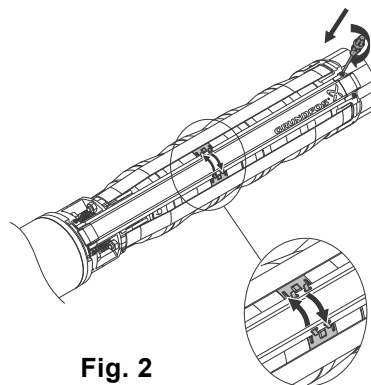


Fig. 2

TM06 0693 0614

SP 77 - SP 95 - SP 125 - SP 160 - SP 215

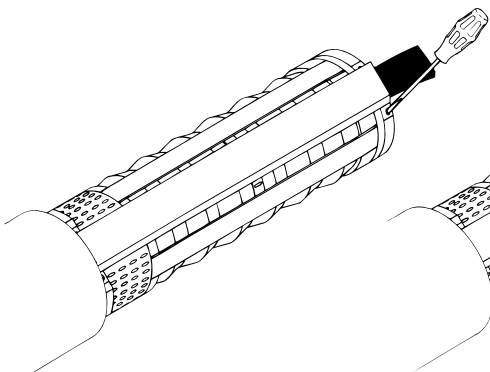


Fig. 1

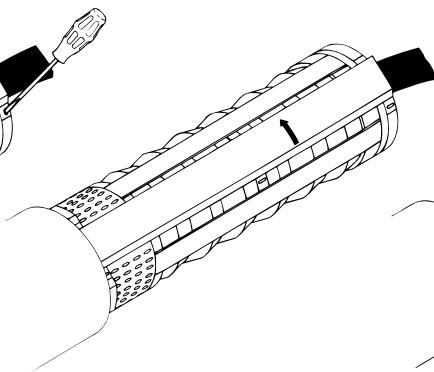


Fig. 2

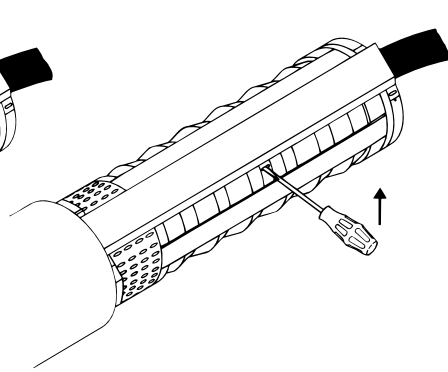


Fig. 3

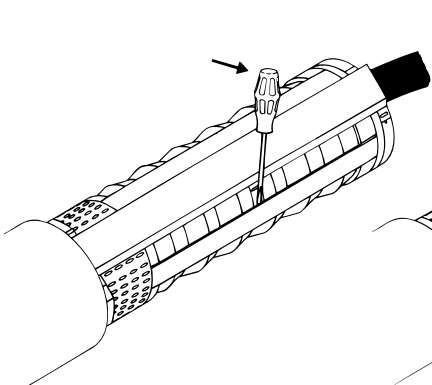


Fig. 1

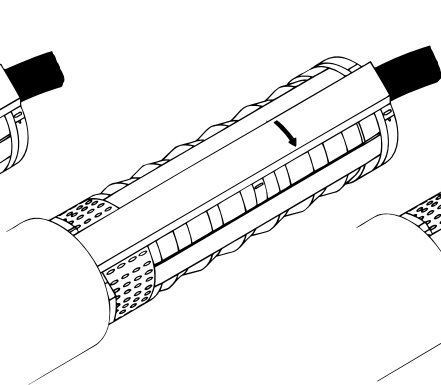


Fig. 2

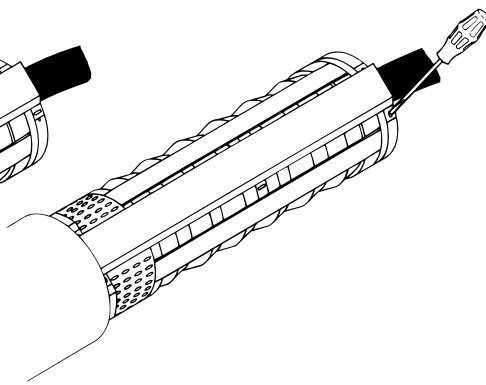


Fig. 3

TM00 1326 5092

YETKİLİ GRUNDFOS SERVİSLERİ

Firma	Adres	Telefon Cep telefonu Faks	İlgili Kişi Eposta
GRUNDFOS POMPA KOCAELİ	GEBZE ORGANİZE SANAYİ BÖLGESİ. İHSAN DEDE CADDESİ.2.YOL 200.SOKAK.NO:204 GEBZE KOCAELİ	0262 679 79 79 0553 259 51 63 0262 679 79 05	EMRAH ŞİMŞEK esimsek@grundfos.com
SUNPO ELEKTRİK ADANA	YEŞİLOBA MAH. 46003 SOK. ARSLANDAMI İŞ MERK. C BLOK NO:6/2-I SEYHAN ADANA	0322 428 50 14 0533 461 71 14 0322 428 48 49	LEVENT BAKIRKOL sunpo-elektrik@hotmail.com
ARDA POMPA ANKARA	26 NOLU İŞ MERKEZİ 1120.SOKAK NO:5/1,5/ 5 OSTİM/ANKARA	0312 385 98 93 0541 805 89 44 0312 385 8904	METİN ENGİN CANBAZ metincanbaz@ardapompa.com.tr
UĞUR SU POMPALARI ANKARA	AHI EVRAN MAHALLESİ ÇAĞRIŞIM CADDESİ NO:2/15 SİNCAN /ANKARA	0312 394 37 52 0532 505 12 62 0312 394 37 19	UĞUR YETİŞ ÖCAL uguryetisocal@gmail.com
GROSER A.Ş. ANTALYA	ŞAFAK MAHALLESİ.5041.SOKAK.SANAYİ 28 C BLOK NO:29 KEPEZ ANTALYA	0242 221 43 43 0532 793 89 74 0242 221 43 42	DOĞAN YÜCEL servis@groseras.com
KOÇYİĞİTLER ELEKTRİK BOBİNAJ ANTALYA	ORTA MAH. SERİK CAD. NO.116 SERİK ANTALYA	0242 722 48 46 0532 523 29 34 0242 722 48 46	BİLAL KOÇYİĞİT kocyigitler@kocyigitlerbobinaj.com
TEKNİK BOBİNAJ BURSA	ALAADDİN BEY MH.624.SK MESE 5 İŞ MERKEZİ NO:26 D:10 NİLÜFER/BURSA	0224 443 78 83 0507 311 19 08 0224 443 78 95	GÜLDEN MÜÇEOĞLU gulden@tbobinaj.com.tr
ASİN TEKNOLOJİ GAZİANTEP	MÜCAHİTLER MAHALLESİ 54 NOLU SOKAK.GÜNEYDOĞU İŞ MERKEZİ NO:10/A ŞEHİTKAMİL	0342 321 69 66 0532 698 69 66 0342 321 69 61	MEHMET DUMAN mduman@asinteknoloji.com.tr
ARI MOTOR İSTANBUL	ORHANLI MESCİT MH.DEMOKRASİ CD.BİRMES SAN.SİT.A-3 BLOK NO:9 TUZLA İSTANBUL	0216 394 21 67 0532 501 47 69 0216 394 23 39	EMİN ARI aycan@arimotor.com.tr
SERİ MEKANİK İSTANBUL	SEYİTNİZAM MAH. DEMİRCİLER SİT. 7.YOL . NO:6 ZEYTİNBURNU İSTANBUL	0212 679 57 23 0532 740 18 02 0212 415 61 98	TAMER ERÜNSAL servis@serimekanik.com
DAMLA POMPA İZMİR	1203/4 SOKAK NO:2/E YENİŞEHİR İZMİR	0232 449 02 48 0532 277 96 44 0232 459 43 05	NEVZAT KIYAK nkiyak@damlapompa.com
ÇAĞRI ELEKTRİK KAYSERİ	ESKİ SANAYİ BÖLGESİ 3.CADDE NO;3-B KOCASINAN-KAYSERİ	0352 320 19 64 0532 326 23 25 0352 330 37 36	ADEM ÇAKICI kayseri.cagrielektrik@gmail.com
MAKSOM OTOMASYON SAMSUN	19 MAYIS MAHALLESİ.642.SOKAK.NO:23 TEKKEKÖY SAMSUN	0362 256 23 56 0532 646 61 42 -	MUSTAFA SARI info@maksom.com
DETAY MÜHENDİSLİK TEKİRDAĞ	ZAFER MAHALLESİ ŞEHİT YÜZBAŞI YÜCEL KENTER CADDESİ 06/A BLOK NO:5-6 ÇORLU TEKİRDAĞ	0282 673 51 33 0549 668 68 68 0282 673 51 35	EROL KARTOĞLU erol@detay-muhendislik.com
ROTATEK ENDÜSTRİYEL TEKİRDAĞ	ZAFER MH. ŞEHİT YÜZBAŞI YÜCEL KENTER CD. YENİ SANAYİ SİTESİ 08-A BLOK NO:14 ÇORLU / TEKİRDAĞ	0282 654 51 99 0532 788 11 39 0282 654 51 81	ÖZCAN AKBAŞ ozcan@rotaendustriyel.com
İLDEM TEKNİK ISITMA VAN	ŞEREFİYE MAH ORDU CAD ARAS AP NO 75 İPEKYOLU VAN	0432 216 20 83 0532 237 54 59 0432 216 20 83	BURHAN DEMİREKİ il-dem-teknik@hotmail.com
BARIŞ BOBİNAJ K.K.T.C.	LARNAKA YOLU ÜZERİ.PAPATYAAPT.NO:3-4 GAZİMAĞUSA	0542 884 06 62 0542 854 11 35 0533 884 06 62	BARIŞ KIZILKILINÇ barisbobinaj@hotmail.com

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +375 17 397 397 3
+375 17 397 397 4
Факс: +375 17 397 397 1
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaj od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algiete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0645

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
Ihsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столицне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 07.05.2020

98074911 08.2020

ECM: 1290512

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved. © 2020 Grundfos Holding A/S. All rights reserved.